

THE AUTHORITY ON SUSTAINABLE BUILDING



adjustment knob preload spring cold water enters the mixing chamber over top of piston cold flow hot flow – piston hot water enters the mixing chamber under the piston spring wax element thermostat control mixing chamber expands or contracts in response to temperature changes and moves piston up or down to control flow of hot and cold water mixed water flow

Tempering valve

© BRANZ 2009